
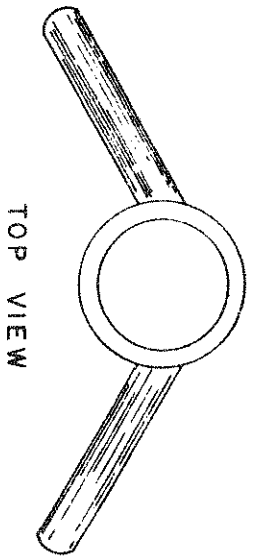


POST DRIVER

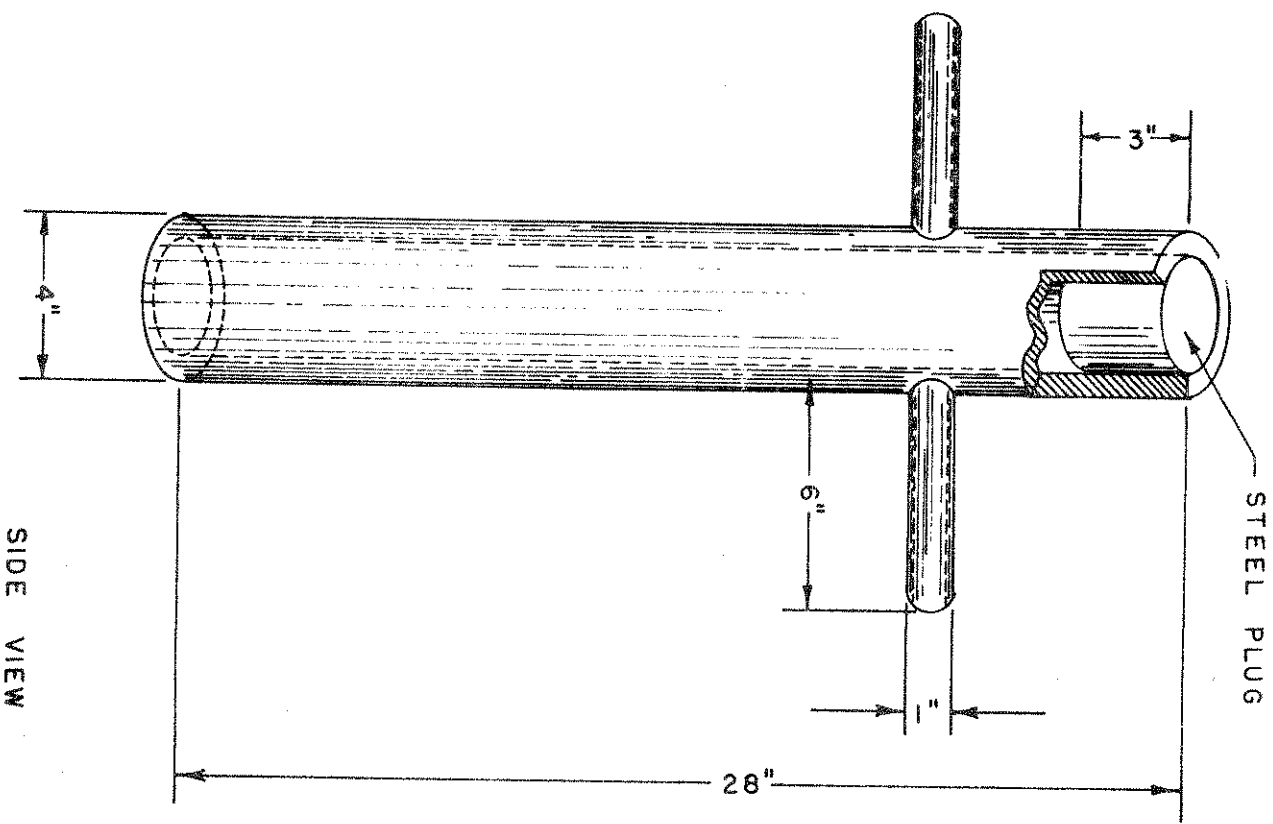

Bill of Material

- 1 - 4" x 28" black pipe
- 2 - 1" x 6" black pipe for handles
- 1 - 4" x 3" plug

Construction Procedure

1. Construct plug by using pipes of smaller sizes and weld both ends solid.
2. Cut handles to set at an angle and weld in place.
3. Weld end solid which receives the 4" plug.
4. Paint with rust inhibiting paint and finish with an enamel paint.

POST DRIVER
SCALE - $\frac{3}{16} = 1"$
DATE - 16 MARCH 1966
USED - COURTESY - C. WESTON
DRAWN & TRACED BY - B.W.
PLAN NUMBER - 801