


WALL TOOL CABINET

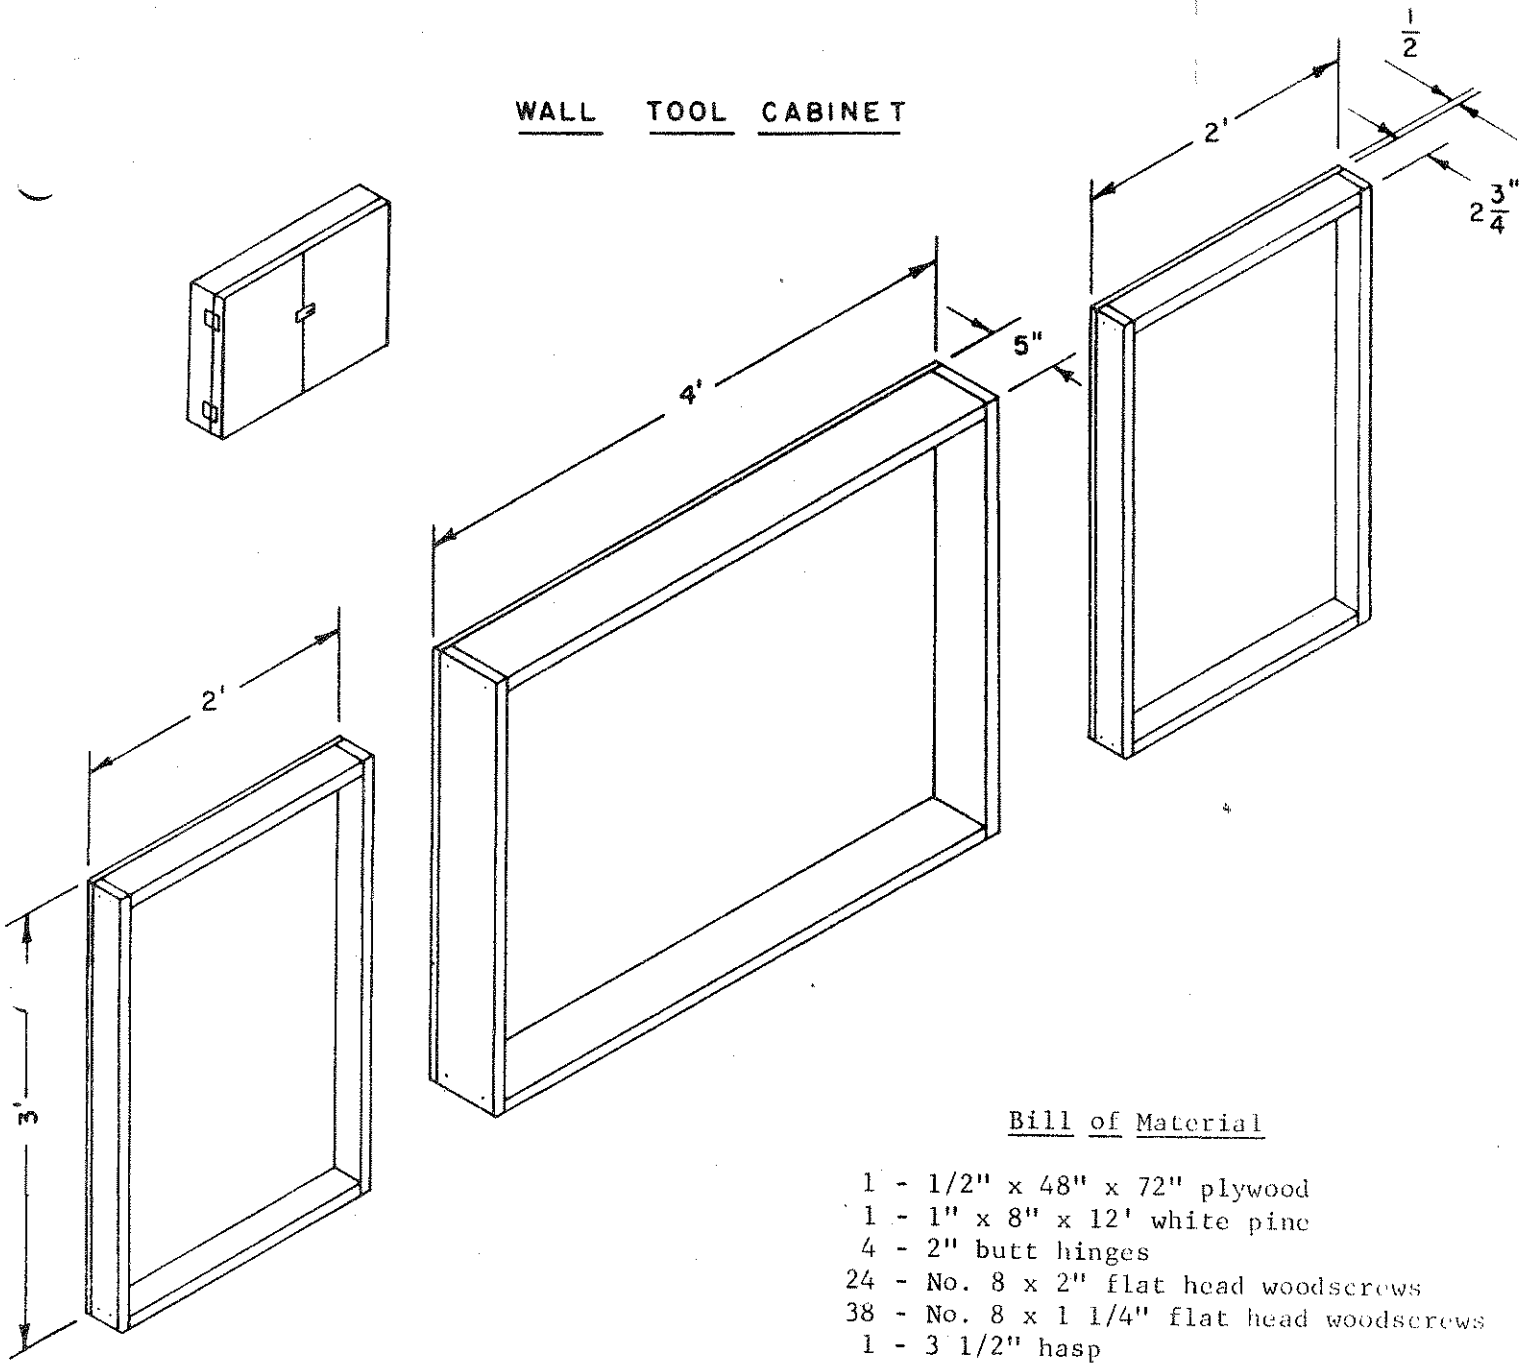

Bill of Material

- 1 - 1/2" x 48" x 72" plywood
- 1 - 1" x 8" x 12' white pine
- 4 - 2" butt hinges
- 24 - No. 8 x 2" flat head wood screws
- 38 - No. 8 x 1 1/4" flat head wood screws
- 1 - 3 1/2" hasp

Construction Procedure

1. Cut plywood into two pieces 3' x 4'.
2. Cut the 1" x 8" into pieces so that when assembled it is the same size as the two pieces of 3' x 4' plywood.
3. Fasten the front and back plywood to the 1" x 8" frame.
4. Space screws so that the solid box can be ripped apart on the table saw.
5. Place completed tool cabinet on table saw and rip off door section. Then take door section and rip to make each door section.
6. Fasten butt hinges and hasp to doors to complete cabinet.
7. Paint with an appropriate paint.

| |
|------------------------------------|
| WALL TOOL CABINET |
| SCALE - $\frac{3}{4}'' = 1' - 0''$ |
| DATE - 20 FEBRUARY 1967 |
| USED - COURTESY - C. WESTON |
| DRAWN & TRACED BY - B.W. |
| PLAN NUMBER - 107 |